




**CLOCK SET-UP PROCEDURE TYPE TEMPUS**

Once everything is installed, wired, and hands are mounted, you will need to set the position of the actual hands (called Tower Clock) in the master clock controller:

Note: Once the controller is energized, the clock will start to 'tick', and upon entering the Tower Clock screen (see below), it will pause, allowing you to set the time. After leaving the Tower Clock screen, it will start ticking again.




Basic control functions:

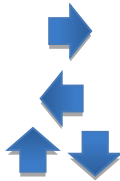

- To enter a screen, scroll right, and save your entry.
- To return to prior screen without saving.
- To scroll through menus & change values.

To Set the Time on the Clock Hands

(starting from main screen which displays current time and date):

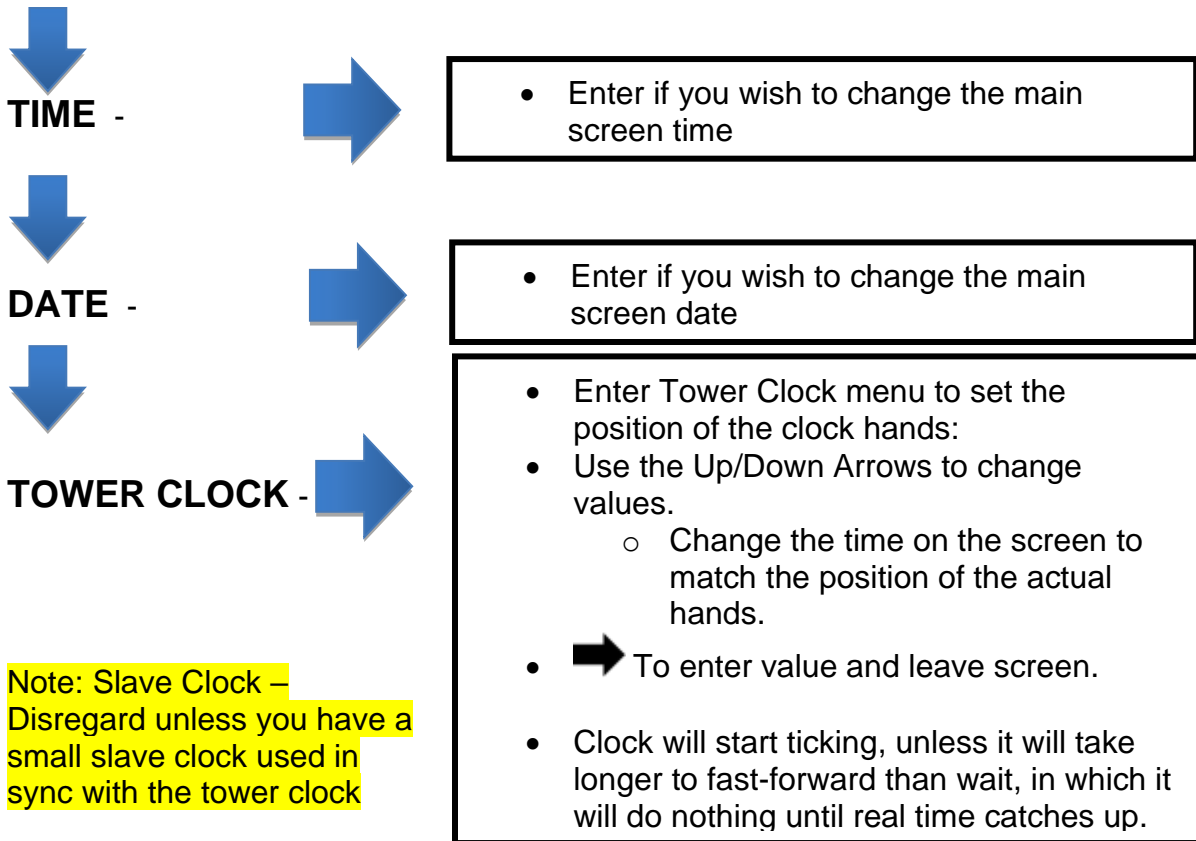

**Note: Slave Clock – Disregard unless you have a small slave clock used in sync with the tower clock**